


INSTALLATION INSTRUCTIONS

Hip Roof


Step 1 Take two cap shingles, bend equally in half, place at both HIP ends, snap chalk line.

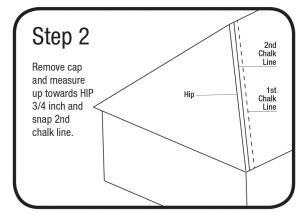

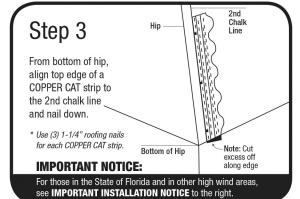

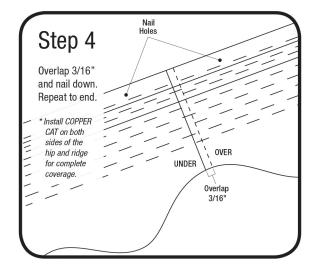


Gable Roof

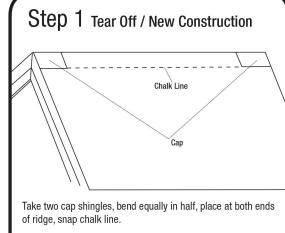

Remove cap and follow same procedure as hip roof installation, working from the left of ridge to complete installation.

Step 1 Existing Shingles / Old Construction

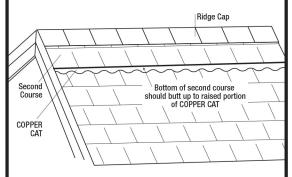

From left, use a roofing flat bar to lift bottom of 2nd course. Slide a COPPER CAT strip under 3/4" to where bottom of shingle butts up to COPPER CAT'S raised portion, nail down, repeat to end.

* Install Copper Cat along all ridge lines for complete coverage. *Cover any exposed nail heads with a dab of roofing cement.

Hip roof. Refer as cap Gable roof. *Refer as cap (tear off / new construction) Gable roof. *Refer as second course (existing shingles / old construction) Nail COPPER CAT Raised Portion Lower Shingle Course

COPPER CAT

IMPORTANT INSTALLATION NOTICE:

- In the State of Florida it is mandatory to use 6 nails to fasten COPPER CAT roofing strips along with applying roof cement on either side of the nail flange to maximize fastening strength.
- In other areas that experience high winds such as, but not limited to, high velocity hurricane winds, unless stated mandatory, it is recommended that 6 nails are to be used as opposed to 3. (Roof cement optional).
- Recommended nails:
 minimum 12 ga. X 1-1/4",
 annular ring-shank roofing
 nail of copper or similar and
 compatible material.



Scan code to watch video clip of installation. To learn more about this product visit

COPPERCAT.COM